Postal address: Phone: Fax: Email: Internet[®]

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany 36035 Fulda, Germany +49 661 6003-0 +49 661 6003-607 mail@jumo.net www.jumo.net

JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK +44 1279 63 55 33 Phone: +44 1279 62 50 29 Fax: Email: sales@jumo.co.uk Internet: www.jumo.co.uk

JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 +1 315 437 5860 Fax: Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 1/23



Secure Data Management and **FDA-Compliant Measured Data** Recording

Brief description

The LOGOSCREEN fd by JUMO is a paperless recorder for the electronic recording, archiving, and evaluation of process data that fully meets FDA requirements according to 21 CFR Part 11. The LOGOSCREEN fd has a maximum of 18 universal measurement inputs and is especially designed for the recording of security-related data. Up to 50 different users can log in to the device with their personal password and provide their respective signature if needed. Efficient PC programs are available to evaluate archived data and to configure the LOGO-SCREEN fd.

JUMD LOGOSCREEN fo 🌣 👿 🗊 쏫 댕 댕 1

Type 706585/...



Type 706585/..., 443 (444) (Stainless steel front (Ex))


Key features

- Conforms to FDA CFR Part 11
- Up to 50 users
- Electronic signature
- Comfortable security management
- Easy operation by control knob or touchpad
- Measurement data storage on CompactFlash memory card or USB memory stick
- Automatic read-out of data through the PCA Communications Software (PCC)
- Integrated web server
- Simultaneous recording of up to 3 batch reports
- Batch control (start, stop, texts) through ٠ barcode reader
- Modbus master function
- ATEX approval with stainless steel front .

(Ex) II 2G Ex pxb IIC Gb ⟨€x⟩ II 2D Ex pxb IIIC Db

AMS2750/CQI-9 (extra code)

Block structure

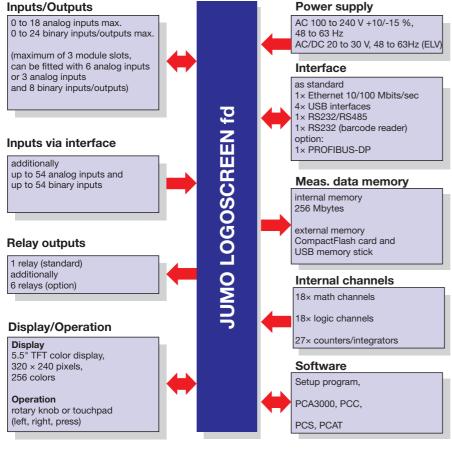

Approvals/marks of conformity (see Technical data)



V2.00/EN/00586136

Postal address: Phone: Fax: Email: Internet[®]

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany 36035 Fulda, Germany +49 661 6003-0 +49 661 6003-607 mail@jumo.net www.jumo.net

JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk

JUMO Process Control. Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 +1 315 437 5860 Fax: Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 2/23

Technical data

Analog inputs

Thermocouple Designation Measuring range **Accuracy**^a Fe-CuNi L DIN 43710 -200 to +900 °C +0 1 % Fe-CuNi J EN 60584 -200 to +1200 °C ±0.1 % from -100 °C Cu-CuNi U DIN 43710 -200 to +600 °C ±0.1 % from -150 °C Cu-CuNi T EN 60584 -270 to +400 °C ±0.1 % from -150 °C ±0.1 % from -80 °C NiCr-Ni K EN 60584 -200 to +1372 °C NiCr-CuNi E EN 60584 -200 to +1000 °C ±0.1 % from -80 °C NiCrSi-NiSi N EN 60584 -100 to +1300 °C ±0.1 % from -80 °C ±0.15 % Pt10Rh-Pt S EN 60584 0 to 1768 °C Pt13Rh-Pt R EN 60584 0 to 1768 °C ±0.15 % Pt30Rh-Pt6Rh B EN 60584 0 to 1820 °C ±0.15 % from 400 °C W3Re/W25Re D 0 to 2495 °C ±0.15 % from 500 °C ±0.15 % from 500 °C W5Re/W26Re C 0 to 2320 °C W3Re/W26Re 0 to 2400 °C ±0.15 % from 500 °C Chromel-copel GOST R 8.585-2001 -200 to +800 °C ±0.15 % from -80 °C Chromel-alumel GOST R 8.585-2001 -200 to +1372 °C ±0.1 % from -80 °C PLII (Platinel II) 0 to 1395 °C ±0.15 % Shortest span type L, J, U, T, K, E, N, chromel-alumel, PLII: 100 °C type S, R, B, D, C, W3Re/W26Re, chromel-copel: 500 °C Range start/end freely programmable within the limits, in 0.1 °C steps Cold junction Pt100 internal or thermostat external constant Cold junction accuracy (internal) ±1 °C Cold junction temperature (external) -50 to +150 °C adjustable Sampling cycle channel 1 to 18: 125 ms in total Input filter 2nd order digital filter; filter constant adjustable from 0 to 10.0 sec Electrical isolation see "Electrical data" on page 6 and "Overview of the electrical isolation" on page 20 Resolution dynamic resolution up to 16 bit Features also programmable in °F

^a The linearization accuracy refers to the maximum measuring range. The linearization accuracy is reduced with short spans.

Resistance thermometer

Designation	Connection circuit	Measuring range	Accuracy ^a	Measurement current
Pt100 EN 60751 (TC = 3.85*10 ⁻³ 1/°C)	2/3-wire 2/3-wire 4-wire	-200 to +100 °C -200 to +850 °C -200 to +850 °C	±0.5 °C ±0.8 °C ±0.5 °C	≈ 250 μA ≈ 250 μA ≈ 250 μA
Pt100 JIS 1604 (TC = 3.917*10 ⁻³ 1/°C)	2/3-wire 2/3-wire 4-wire	-200 to +100 °C -200 to +650 °C -200 to +650 °C	±0.5 °C ±0.8 °C ±0.5 °C	≈ 250 μA ≈ 250 μA ≈ 250 μA
Pt100 GOST 6651-94 A.1 (TC = 3.91*10 ⁻³ 1/°C)	2/3-wire, 4-wire 2/3-wire, 4-wire	-200 to +100 °C -200 to +850 °C	±0.5 °C ±0.8 °C	≈ 250 μA ≈ 250 μA
Pt500 EN 60751 (TC = 3.85*10 ⁻³ 1/°C)	2/3-wire, 4-wire 2/3-wire, 4-wire	-200 to +100 °C -200 to +850 °C	±0.5 °C ±0.9 °C	≈ 100 μA ≈ 100 μA
Pt1000 EN 60751 (TC = 3.85*10 ⁻³ 1/°C)	2/3-wire 2/3-wire 4-wire	-200 to +100 °C -200 to +850 °C -200 to +850 °C	±0.5 °C ±0.8 °C ±0.5 °C	≈ 100 μA ≈ 100 μA ≈ 100 μA
Ni100 DIN 43760 (TC = 6.18*10 ⁻³ 1/°C)	2/3-wire, 4-wire	-60 to +180 °C	±0.4 °C	≈ 250 µA
Pt50 ST RGW 1057 1985 (TC = 3.91*10 ⁻³ 1/°C)	2/3-wire 2/3-wire 4-wire 4-wire	-200 to +100 °C -200 to +1100 °C -200 to +100 °C -200 to +1100 °C	±0.5 °C ±0.9 °C ±0.5 °C ±0.6 °C	≈ 250 μA ≈ 250 μA ≈ 250 μA ≈ 250 μA

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mail@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 3/23

Designation	Connection circuit	Measuring range	Accuracy ^a	Measurement current
Cu50	2/3-wire	-50 to +100 °C	±0.5 °C	≈ 250 µA
(TC = 4.26*10 ⁻³ 1/°C)	2/3-wire	-50 to +200 °C	±0.9 °C	≈ 250 µA
	4-wire	-50 to +100 °C	±0.5 °C	≈ 250 µA
	4-wire	-50 to +200 °C	±0.7 °C	≈ 250µA
Cu100 GOST 6651-94 A.4	2/3-wire	-50 to +100 °C	±0.5 °C	≈ 250 μA
(TC = 4.26*10 ⁻³ 1/°C)	2/3-wire	-50 to +200 °C	±0.9 °C	≈ 250 µA
	4-wire	-50 to +100 °C	±0.5 °C	≈ 250 µA
	4-wire	-50 to +200 °C	±0.6 °C	≈ 250 µA
Connection circuit	2-, 3-, or 4-wire circu	2-, 3-, or 4-wire circuit		
Shortest span	15 °C	15 °C		
Sensor lead resistance	max. 30 per conduc	max. 30 per conductor for 3-wire/4-wire circuit		
	max. 10 per conduc	max. 10 per conductor for 2-wire circuit		
Range start/end	freely programmable	freely programmable within the limits, in 0.1 °C steps		
Sampling cycle	channel 1 to 18: 125	channel 1 to 18: 125 ms in total		
Input filter	2nd order digital filte	2nd order digital filter; filter constant adjustable from 0 to 10 sec		
Electrical isolation	see "Electrical data"	see "Electrical data" on page 6 and		
	"Overview of the elec	"Overview of the electrical isolation" on page 20		
Resolution	dynamic resolution u	dynamic resolution up to 16 bit		
Features	also programmable i	also programmable in °F		

^a The linearization accuracy refers to the maximum measuring range. The linearization accuracy is reduced with short spans.

Resistance transmitter and potentiometer

Designation	Measuring range	Accuracy ^a	Measurement current	
Resistance transmitter	up to 4000 Ω	±4 Ω	≈ 100 µA	
Potentiometer	< 400 Ω	±400 mΩ	≈ 250 μA	
	$\geq 400~\Omega$ to 4000 Ω	±4 Ω	≈ 100 µA	
Connection circuit		resistance transmitter: 3-wire circuit potentiometer: 2-/3-/4-wire circuit		
Shortest span	60Ω			
Sensor lead resistance	max. 30 per conductor for 4-wire circuit max. 10 per conductor for 2-/3-wire circuit			
Resistance values	freely programmable with	freely programmable within the limits, in 0.1 steps		
Sampling cycle	channel 1 to 18: 125 ms in total			
Input filter	2nd order digital filter; filter constant adjustable from 0 to 10.0 sec			
Electrical isolation	see "Electrical data" on page 6 and "Overview of the electrical isolation" on page 20			
Resolution	dynamic resolution up to	dynamic resolution up to 16 bit		

^a The linearization accuracy refers to the maximum measuring range. The linearization accuracy is reduced with short spans.

 Delivery address:
 Mackenrodtstraße 14 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 Email:
 mail@jumo.net

 Internet:
 www.jumo.net

 JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 4/23

Input for DC voltage, DC current

Basic range	Accuracy ^a	Input resistance	
-12 to +112 mV	±100 μV	$R_E \ge 1 M\Omega$	
-10 to +210 mV	±240 μV	R _E ≥ 470 kΩ	
-1.5 to +11.5 V	±6 mV	$R_E \ge 470 \text{ k}\Omega$	
-0.12 to +1.12 V	±1 mV	$R_E \ge 470 \ k\Omega$	
-1.2 to +1.2 V	±2 mV	$R_E \ge 470 \text{ k}\Omega$	
-11.2 to +11.2 V	±12 mV	$R_E \ge 470 \ k\Omega$	
Shortest span	5mV		
Range start/end	freely programmable within t	freely programmable within the limits in 0.01 mV steps	
-1.3 to +22 mA	±20 μA	burden voltage ≤ 3 V	
-22 to +22 mA	±44 μA	burden voltage \leq 3 V	
Shortest span	0.5mA	0.5mA	
Range start/end	freely programmable within t	freely programmable within the limits in 0.01 mA steps	
Overrange/underrange	according to NAMUR NE 43	according to NAMUR NE 43	
Sampling cycle	channel 1 to 18: 125 ms in to	channel 1 to 18: 125 ms in total	
Input filter	2nd order digital filter; filter c	2nd order digital filter; filter constant adjustable from 0 to 10.0 sec	
Electrical isolation	see "Electrical data" on page	see "Electrical data" on page 6 and	
	"Overview of the electrical is	"Overview of the electrical isolation" on page 20	
Resolution	dynamic resolution up to 16	dynamic resolution up to 16 bit	

^a The linearization accuracy refers to the maximum measuring range. The linearization accuracy is reduced with short spans.

Transducer short circuit/break

	Short-circuit ^a	Break ^a
Thermocouple	not detected	detected
Resistance thermometer	detected	detected
Resistance transmitter	not detected	detected
Potentiometer	not detected	detected
Voltage $\leq \pm 210 \text{ mV}$	not detected	detected
Voltage > ±210 mV	not detected	not detected
Current	not detected	not detected

^a Programmable reaction of device, e.g. triggering alarm

Binary inputs/outputs (option)

Input or output	configurable as input or output
Number	8, 16 or 24, depending on the device version, to DIN VDE 0411, Part 500; max. 25 Hz, max. 32 V
Input	
• level	logic "0": -3 to +5 V (input current max. ± 1 mA), logic "1": 12 to 30 V (2.5 mA \leq input current \leq 5 mA)
counting frequency	8Hz
High-speed input	the first two binary inputs of each module (B1, B2, B9, B10, B17, B18), if the module is not fitted with relays or 6 analog inputs
• task	count function, e.g. for flow measurement
counting frequency	10 kHz
Output	
• type	open-collector output, switches relative to positive voltage
• level	logic "0": transistor is inhibited (max. permissible voltage across switching transistor 30 V, max. leakage current 0.1 mA) logic "1": transistor is switched on (max. voltage across switching transistor 1.6 V, max. current 50 mA)
sampling cycle	at least 1 sec (1 Hz)

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mail@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 5/23

Outputs

1 relay (ex-factory)	changeover (SPDT), 3 A, 230 V AC ^a
6 relays (option)	changeover (SPDT), 3 A, 230 V AC ^{a, b}

^a With resistive load.

^b It is not permissible to mix SELV circuits and supply circuits.

Interfaces

RS332/RS485 (connector 7) qty. 1, switchable between RS232 and RS485 • protocol Modbus master, Modbus slave and barcode reader • baud rate 9600, 19200, 38400 • modem can be connected • connector SUB-D • external inputs via the Modbus master/slave function, 54 analog and 54 binary RS232 for barcode reader (connector 2) qty. 1 • protocol Modbus master, Modbus slave and barcode reader • baud rate 9600, 19200, 38400 • connector SUB-D • connector SUB-D • baud rate 9600, 19200, 38400 • connector SUB-D • connector SUB-D • connector SUB-D • external inputs via the Modbus master/slave function, 54 analog and 54 binary Ethernet (connector 6) wax. 1 • quantity max. 1 • quantity max. 1 • protocols TCP, IP, HTTP, DHCP, SMTP, ModbusTCP • baud rate 10 Mbit/s, 100 Mbit/s • data format U USB host (connector 5) 2 • quantity 2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation • use 100 mA USB device (connector 15) 2 •	Interfaces	
• baud rate9600, 19200, 38400• modemcan be connected• connectorSUB-D• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryRS232 for barcode reader (connector 2)qty. 1reprotocol9600, 19200, 38400• baud rate9600, 19200, 38400• connectorSUB-D• connectorSUB-D• connectorSUB-D• connector 6)wia the Modbus master/slave function, 54 analog and 54 binary• quantitymax. 1• quantitymax. 1• protocolsCP, IP, HTTP, DHCP, SMTP, ModbusTCP• baud rate10 Mbit/s, 100 Mbit/s• connector 5)RJ45• quantity2 (or 1 with stainless steel front), connector fot with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)• useio connector 15 and front connector (not with stainless steel front); no parallel operation)• useio connector 15 and front connector (not with stainless steel front); no parallel operation)	RS232/RS485 (connector 7)	qty. 1, switchable between RS232 and RS485
modemcan be connectedconnectorSUB-Dexternal inputsvia the Modbus master/slave function, 54 analog and 54 binaryRS232 for barcode reader (connector 2)qty. 1protocolModbus master, Modbus slave and barcode reader> baud rate9600, 19200, 38400connectorSUB-DconnectorSUB-Dexternal inputsvia the Modbus master/slave function, 54 analog and 54 binaryEthernet (connector 6)max. 1• quantitymax. 1• protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCP• baud rate10 Mbit/s, 100 Mbit/s• connector 5)RJ45• data formatHTMLUSB host (connector 5)2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation)• use10 maxuse2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation)• use2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation)• use10 mA	protocol	Modbus master, Modbus slave and barcode reader
• connectorSUB-D• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryRS232 for barcode reader (connector 2)qty. 1• protocolModbus master, Modbus slave and barcode reader• baud rate9600, 19200, 38400• connectorSUB-D• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryEthernet (connector 6)•• quantitymax. 1• protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCP• baud rate10 Mbit/s, 100 Mbit/s• connectorRJ45• data formatHTMLUSB host (connector 5)•• quantity2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation• use100 mAUSB device (connector 15)•• use(or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• useuse• use(or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• use(or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• use(or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• use(or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation	baud rate	9600, 19200, 38400
external inputsvia the Modbus master/slave function, 54 analog and 54 binaryRS232 for barcode reader (connector 2)qty. 1• protocolModbus master, Modbus slave and barcode reader• baud rate9600, 19200, 38400• connectorSUB-D• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryEthernet (connector 6)• quantitymax. 1• protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCP• baud rate10 Mbit/s, 100 Mbit/s• connectorRJ45• data formatHTMLUSB host (connector 5)2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• use2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation• use10 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• usefor connecting to the (master) computer	• modem	can be connected
RS232 for barcode reader (connector 2) qty. 1 • protocol Modbus master, Modbus slave and barcode reader • baud rate 9600, 19200, 38400 • connector SUB-D • external inputs via the Modbus master/slave function, 54 analog and 54 binary Ethernet (connector 6) max. 1 • protocols TCP, IP, HTTP, DHCP, SMTP, ModbusTCP • baud rate 10 Mbit/s, 100 Mbit/s • connector RJ45 • data format HTML USB host (connector 5) 2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation • use ior connecting a memory stick • max. current 100 mA USB device (connector 15) 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation • use ior connecting a memory stick • max. current 100 mA USB device (connector 15) 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) • quantity 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)	connector	SUB-D
• protocolModbus master, Modbus slave and barcode reader• baud rate9600, 19200, 38400• connectorSUB-D• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryEthernet (connector 6)	external inputs	via the Modbus master/slave function, 54 analog and 54 binary
• baud rate9600, 19200, 38400• connectorSUB-D• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryEthernet (connector 6)• quantitymax. 1• protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCP• baud rate10 Mbit/s, 100 Mbit/s• connectorRJ45• data formatHTMLUSB host (connector 5)2 (or 1 with stainless steel front), connector for 5 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)• usefor connecting a memory stick• use100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)• usein connecting to the (master) computer	RS232 for barcode reader (connector 2)	qty. 1
• connectorSUB-D• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryEthernet (connector 6)max. 1• quantitymax. 1• protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCP• baud rate10 Mbit/s, 100 Mbit/s• connectorRJ45• data formatHTMLUSB host (connector 5)2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current20 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) connector 15 and front connector (not with stainless steel front); no parallel operation) connector 15 and front connector (not with stainless steel front); no parallel operation) connector 15 and front connector (not with stainless steel front); no parallel operation) connector 15 and front connector (not with stainless steel front); no parallel operation) connector 15 and front connector (not with stainless steel front); no parallel operation) connector 15 and front connector (not with stainless steel front); no parallel operation) connector 15 and front connector (not with stainless steel front); no parallel operation)	protocol	Modbus master, Modbus slave and barcode reader
• external inputsvia the Modbus master/slave function, 54 analog and 54 binaryEthernet (connector 6)max. 1• quantitymax. 1• protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCP• baud rate10 Mbit/s, 100 Mbit/s• connectorRJ45• data formatHTMLUSB host (connector 5)2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• use100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• use100 mA	baud rate	9600, 19200, 38400
Ethernet (connector 6) max. 1 • quantity max. 1 • protocols TCP, IP, HTTP, DHCP, SMTP, ModbusTCP • baud rate 10 Mbit/s, 100 Mbit/s • connector RJ45 • data format HTML USB host (connector 5) 2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation • use for connecting a memory stick • max. current 100 mA USB device (connector 15) 2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation • use 5 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation • use 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) • use 5 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation) • use 6 (or connecting to the (master) computer	connector	SUB-D
quantitymax. 1protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCPbaud rate10 Mbit/s, 100 Mbit/sconnectorRJ45data formatHTMLUSB host (connector 5)2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operationusefor connecting a memory stickmax. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector for connecting a memory stickusefor connecting a memory stickuse100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operationusefor connecting a memory stickusefor connecting to the (master) computer	external inputs	via the Modbus master/slave function, 54 analog and 54 binary
protocolsTCP, IP, HTTP, DHCP, SMTP, ModbusTCPbaud rate10 Mbit/s, 100 Mbit/sconnectorRJ45data formatHTMLUSB host (connector 5)2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operationusefor connecting a memory stickmax. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operationusefor connecting a memory stickuse100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)usefor connecting to the (master) computer	Ethernet (connector 6)	
• baud rate10 Mbit/s, 100 Mbit/s• connectorRJ45• data formatHTMLUSB host (connector 5)• quantity2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• use100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)• usefor connecting to the (master) computer	quantity	max. 1
• connectorRJ45• data formatHTMLUSB host (connector 5)• quantity2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• quantity2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)• usefor connecting to the (master) computer	protocols	TCP, IP, HTTP, DHCP, SMTP, ModbusTCP
• data formatHTMLUSB host (connector 5)-• quantity2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• max. current100 mAUSB device (connector 15)-• quantity2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation• usefor connecting a memory stick• usefor connecting a memory stick• guantity2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation)• usefor connecting to the (master) computer	baud rate	10 Mbit/s, 100 Mbit/s
USB host (connector 5) 2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation • use for connecting a memory stick • max. current 100 mA USB device (connector 15) 2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation • use 2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation • use 2 (or 1 with stainless steel front), connector (not with stainless steel front); no parallel operation) • use for connecting to the (master) computer	connector	RJ45
 quantity 2 (or 1 with stainless steel front), connector 5 and front connector (not with stainless steel front); no parallel operation use for connecting a memory stick non mA USB device (connector 15) quantity 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) use for connecting to the (master) computer 	data format	HTML
• use connector 5 and front connector (not with stainless steel front); no parallel operation • use for connecting a memory stick • max. current 100 mA USB device (connector 15) 2 (or 1 with stainless steel front), connector (not with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) • use for connecting to the (master) computer	USB host (connector 5)	
• max. current 100 mA USB device (connector 15) 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) • use for connecting to the (master) computer	• quantity	
USB device (connector 15) 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) • use for connecting to the (master) computer	• use	for connecting a memory stick
 quantity 2 (or 1 with stainless steel front), connector 15 and front connector (not with stainless steel front); no parallel operation) use for connecting to the (master) computer 	max. current	100 mA
connector 15 and front connector (not with stainless steel front); no parallel operation) use for connecting to the (master) computer	USB device (connector 15)	
	quantity	
PROFIBUS-DP (connector 3)	• use	for connecting to the (master) computer
	PROFIBUS-DP (connector 3)	
quantity max. 1 (extra code)	quantity	max. 1 (extra code)
connector SUB-D	connector	SUB-D
transfer rate max. 12 Mbit/s	transfer rate	max. 12 Mbit/s
external inputs via Profibus slave function, 54 analog and 54 binary	external inputs	via Profibus slave function, 54 analog and 54 binary

Screen

Resolution/size	320 × 240 pixels/5.5"
Type/number of colors	TFT color screen/256 colors
Screen refresh rate	> 150 Hz
Brightness setting	adjustable on instrument
Screen saver (switch-off)	through waiting time or control signal
Operation	
die-cast zinc front	via control knob
 stainless steel front (extra code) 	via capacitive touchpad
	Caution: Do not use the touchpad with damp/wet fingers to avoid condensation.

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mail@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 6/23

Electrical data

Supply voltage (switch-mode PSU)	AC 100 to 240 V +10/-15%, 48 to 63Hz or AC/DC 20 to 30 V, 48 to 63Hz (ELV)
Electrical safety	to EN 61010, Part 1, July 2011
	overvoltage category II, pollution degree 2
Protection class I	terminal for PE conductor
Test voltages (type test)	
mains supply circuit to meas. circuit	with AC supply: 2.3 kV/50 Hz, 1 min, with AC/DC supply: 2.3 kV/50 Hz, 1 min
 mains supply circuit to housing (protective conductor) 	with AC supply: 2.3 kV/50 Hz, 1 min, with AC/DC supply: 2.3 kV/50 Hz, 1 min
 measuring current circuits to measuring current circuit and housing 	500 V/50 Hz, 1 min
electrical isolation between analog inputs	up to 30 V AC and 50 V DC
Supply voltage error	< 0.1 % of range span
Power consumption	approx. 40 VA
Data backup	CompactFlash memory card
Electrical connection	
mains supply and relays	at rear through pluggable screw terminals, 5.08 mm raster, max. conductor cross-section \leq 2.5 mm ² or 2× 1.5 mm ² with ferrules
 analog and binary inputs 	at rear through pluggable screw terminals, 3.81 mm raster, max. conductor cross-section \leq 1.5 mm ²

Environmental influences

Ambient temperature range	0 to +50 °C
Ambient temperature effect	0.03 %/°C
Storage temperature range	-20 to +60 °C
Climatic conditions	\leq 75 % relative humidity, no condensation
Site altitude	up to 2000 m above sea level
EMC	EN 61326-1
interference emission	class A - only for industrial use -
immunity to interference	to industrial requirements

Housing

Housing front	zinc die-casting, optionally in stainless steel (extra code)
Housing type	housing for flush-panel mounting to IEC 61554, in stainless steel (indoor use)
Bezel size	144 mm × 144 mm to IEC 61554
Depth behind panel	193 mm (incl. terminals)
Panel cut-out	138 ^{+1.0} mm × 138 ^{+1.0} mm to IEC 61554
Panel thickness	2 to 40 mm
Housing mounting	in panel to DIN 43834
Operating position	unrestricted, but taking into account the viewing angle of the screen, horizontally $\pm 65^{\circ}$, vertically $\pm 40^{\circ}$ to -65°
Enclosure protection	to EN 60529 Category 2, front IP65, rear IP20
Weight	approx. 3.5 kg

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mai@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 7/23

Approvals/marks of conformity

Mark of conformity	Testing laboratory	Certificates / certification numbers	Test basis	Valid for
c UL us	Underwriters Laboratories	E 201387	UL 61010-1 CAN/CSA-C22.2 No. 61010-1	the flush-mounted instrument; not in conjunction with extra code 350
II 2G Ex pxb IIC Gb II 2D Ex pxb IIIC Db	Eurofins Electrosuisse	SEV 08 ATEX 0155 U	EN 60079-0:2012 + A11:2013 EN 60079-2:2014	the flush-mounted instrument; only in conjunction with extra code 443 or 444 and without extra code 350
NEMA 4X	Intertek	4010203	NEMA 250-2008	the flush-mounted instrument; only in conjunction with extra code 443 and without extra code 350

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany +49 661 6003-0 Phone: Fax: +49 661 6003-607 Email: mail@jumo.net Internet[®] www.jumo.net

JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway

Harlow, Essex, CM20 2DY, UK +44 1279 63 55 33 Phone: +44 1279 62 50 29 Fax: Email: sales@jumo.co.uk Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 +1 315 437 5860 Fax: Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585





Instrument description

Hardware

The paperless recorder is built to a modular design. The basic type consists of a PSU board (incl. relays) and a CPU board (incl. Ethernet and RS232/RS485 interfaces and an RS232 interface for barcode reader and USB interface connection).

Module slots 1, 2 and 3 can be fitted with input modules, each with 6 analog inputs or 3 analog inputs and 8 binary inputs/outputs. Alternatively, module slot 3 can be fitted with a relay module that has 6 relays.

Optionally, the PSU board can be equipped with a PROFIBUS-DP interface.

Data recording

Measurements are acquired continuously in a 125msec sampling cycle. Based on these measurements, reports are compiled and limits checked.

The measurements are transferred to the main memory of the instrument, according to the programmable storage cycle and stored value (maximum, minimum, average, min&max, instantaneous value or economy mode).

The paperless recorder saves the data in groups, and an input can be assigned to several groups (maximum 9).

Main memory (SRAM)

The data stored in the SRAM are regularly copied to the internal memory in 20 kbyte blocks.

Internal memory

When a block in the main memory has been filled, it is copied to the internal memory. The internal memory has a capacity of max. 256 Mbytes.

Every write action is monitored, so that any errors in saving the data can be immediately identified

The instrument monitors the capacity of the internal memory and activates one of the "memory alarm" signals when the capacity falls below the configurable residual capacity level. These signals can be used, for instance, to operate the alarm relay.

The memory is written as a ring memory, i. e. when the memory is full, the oldest data are automatically overwritten by the new data.

Data from the internal memory can be shown as a history presentation on the recorder. The size of the history memory can be configured.

Data transfer to the PC

Data transfer from the paperless recorder to a PC is made by means of the external CompactFlash memory card (not available with stainless steel front), the USB memory stick or via one of the interfaces (USB device, RS232, RS485, Ethernet).

Data security

The data are stored in coded form in a proprietary format. This ensures a high level of data security.

If the paperless recorder is disconnected from the supply, then:

- RAM and clock time are buffered by a lithium battery (ex-factory) ≥ 10 years or with a storage capacitor \geq 2 days (ambient temperature 0 to +45 °C),
- measurement and configuration data in the internal memory will not be lost.

Recording duration

Depending on the configuration of the instrument, the duration of the recording can vary over a considerable range (from a few days up to several months).

Report

For each channel of a group, a report (maximum/minimum/average or integrator) can be run over defined periods.

Batch reports

Up to three batch reports can be created simultaneously in the recorder. The measurement data, start, end and duration of each batch can be displayed together with a batch counter and freely definable texts, both on the recorder and within the PC Evaluation Software PCA3000.

On request, a barcode reader can be used to start batches and read in batch texts.

Limit checkline changeover of operating mode

Over/underlimit conditions trigger alarms. An alarm can be used, for instance, as a control signal for changing over the operating mode. The storage cycle and stored value can be configured separately for all three operating modes

With the help of the alarm delay function, brief occurrences or over/underlimit conditions can be filtered out, with the result that no alarm is generated.

Normal operation

If the instrument is not in timed or event operation, normal operation is active.

Event operation

Event operation is activated/deactivated by a control signal (binary input, group/ combination alarm, ...). As long as the control signal is active, the instrument is in event operation.

Timed operation

Timed operation is active on a daily basis within a programmable time period. The operating modes have different priorities.

Counters/integrators

27 additional internal channels are available for use as counters, integrators, operating time counters or for flow measurements.

These counters are controlled through the binary inputs, the alarms, or via the logic channels. The analog channels can be used for the integrators.

The numerical indication is shown in a separate window, with a maximum of 9 digits. The acquisition period can be selected as: periodic, daily, weekly, monthly, yearly as well as external, total (overall count) or daily from ... to.

A maximum of 6 binary inputs are available as high-speed counters with a 10 kHz sampling cycle rate.

Math/logic module (extra code)

The module for math and logic (18 channels each) enables, for instance, the combination of analog channels with one another, and also the combination of analog channels with counters and binary inputs. The operators available for formulae are: +, -, *, /, SQRT(), MIN(), MAX(), SIN(), COS(), TAN(), **, EXP(), ABS(), INT(), FRC(), LOG(), LN(), humidity, moving average or !, &, |, ^, as well as (and). The math and logic module can only be configured through the setup program.

 Delivery address:
 Mackenrodtstraße 14 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 Email:
 mail@jumo.net

 Internet:
 www.jumo.net

 JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 9/23

Time server (SNTP)

The time server function (SNTP = simple network time protocol) enables the synchronization between the time of the paperless recorder with external time signals (server; e.g. atomic clock).

Mobus slave monitoring of external inputs

If active Modbus slave monitoring (timeout monitoring) is the case then the communication (Modbus protocol) between the slave (paperless recorder) and the master with regard to the external analog and binary inputs is monitored. If no communication takes place within the configured time then an alarm message is displayed and entered into the alarm and event list.

Operation and configuration


On the recorder

The instrument is configured from the control knob (or with stainless steel front, from the touchpad) on the front panel under menu guidance.

 Shift current menu position (cursor) to the left or upwards.
 Shift current menu position (cursor) to the right or downwards.


When the control knob is pressed, the current function is executed.

Example:

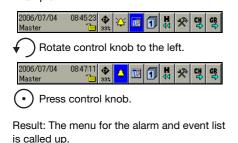



Rotate control knob to the left.

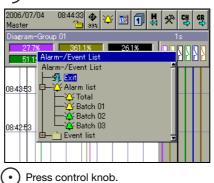

Result: The menu for the alarm and event list is closed again.



GP Integrated user lists (different users with different authorizations) protect the recorder against unauthorized access.


Through the setup program

As an alternative to the configuration from the control knob on the recorder, the instrument can also be configured through the setup program.

Communication between the setup program and the paperless recorder is made through the:

- USB device interface
- serial interface
- Ethernet interface
- CompactFlash memory card or

USB memory stick

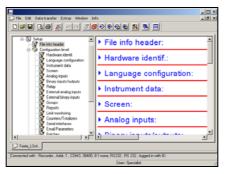

The configuration data can be archived on a data storage medium and output to the printer.

Operating language


Two languages (see order details) are integrated in the instrument ex-factory. The setup program is used to exchange the operator language.

The languages available at the moment are: English, French, German, Russian, Japanese, Chinese, Italian, Romanian, Czech, Hungarian, Polish, Greek, Spanish, and Portuguese.

Other language versions (with Unicode capability) can be created.

Process images (editor)

The setup program can create process images (max. 9; one process image for each group) and transfer them to the paperless recorder for display. Up to 25 objects (images, analog channels, binary channels, texts, ...) can be used in a process image.

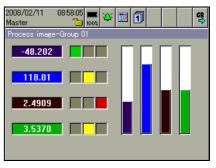

One process image is integrated in the paperless recorder ex-factory.

Postal address: Phone: Fax: Email: Internet[®]

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany 36035 Fulda, Germany +49 661 6003-0 +49 661 6003-607 mail@jumo.net www.jumo.net

JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK +44 1279 63 55 33 Phone: Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk

JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 +1 315 437 5860 Fax: Email: info.us@jumo.net Internet: www.jumousa.com




Data Sheet 706585

Page 10/23

Visualization on the instrument

Operator level

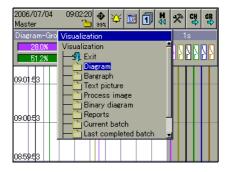


Selection of visualization

Bar graph presentation




- Bar graph presentation of analog channels
- On/Off presentation of binary channels Display of current analog channels with
- scaling and limit markers Color change of bar graph to red when
- limits are infringed

Process image

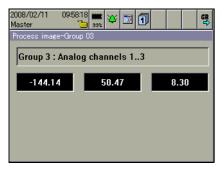

- Freely configurable presentation (through . the setup program) of analog and binary signals with background pictures
- One process image for each group

Vertical diagram

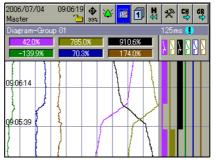

- Recorder chart presentation of analog and binary channels
- Display of scaling and limit markers of a channel (can be switched on/off)
- Numerical display of current analog channels

Numerical presentation



- Large numerical presentation of analog channels, including the channel name and description
- Each analog channel can be switched to the foreground
- On/Off presentation of binary channels

Horizontal diagram



- Functionality corresponds to the vertical appearance
- Visualization without analog signals is also possible (either horizontally or vertically)

Numerical 1-channel presentation



- Clear presentation of an analog channel
- An analog input is shown simultaneously as a bar graph and a number
- Display of channel name and description Display of scaling and
- limit markers

Delivery address:Mackenrodtstraße 14
36039 Fulda, GermanyPostal address:36035 Fulda, GermanyPhone:+49 661 6003-0Fax:+49 661 6003-607Email:mail@jumo.netInternet:www.jumo.net


JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585


Page 11/23

Binary presentation (vertical)

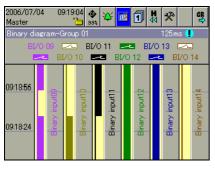

• On/Off presentation of binary channels

Binary presentation (horizontal)

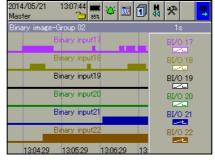


• On/Off presentation of binary channels

Batch reports

2006/07/04 09:25:34 🚸 Master 👌 993	🌤 👿 🚺 🖉
Current batch-Batch 01	ł
✓ OK Stop batch	
Program name	Default Text 01
Customer info	Default Text 03
Batch name	abe 123
Batch number	000000000Default Text
Batch start	09:25:28
Batch end	09:25:33
Batch duration	00:05


- 3 batches documented simultaneously Changeover between current and
- completed batch reportsElectronic signature is possible
- Batch texts via interface and barcode reader, among others

History presentation

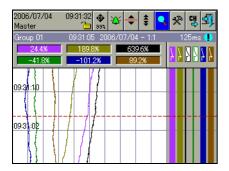

- All stored measurement data are shown as curves at different zoom levels
- Display of scaling and limit markers of a channel
- Numerical display of the measurements of the analog channels at the cursor position
- Shifting of the visible section within the stored measurement data

Counter/integrator presentation

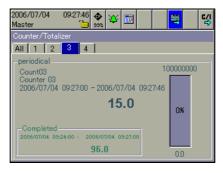


- Presentation of up to 27 counters or integrators
- Changeover between individual and overall display
- Display of the current and the most recently completed count

Presentation of alarm lists

006/07/04 laster	09:47:41	@ 33%								
Alarm list-Tot	al									
Date	Time		Description							
2006/07/04	09:47:22	-	Alarm Lim02							
2006/07/04	09:47:15	*	Alarm Lim01							
2006/07/04	09:47:15	¥	I/O 9 not calibrated							
2006/07/04	09:47:15	*	High Alarm AI08							
2006/07/04	09:47:15	X	I/O 8 not calibrated							
2006/07/04	09:47:15	X	I/O 7 not calibrated							
2006/07/04	09:47:15	*	High Alarm AI02							


- Display of current alarms
- For the instrument as a whole or batch-related
- Up to 150 entries visible on the recorder

Report

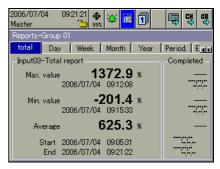

- Display of different reports for the analog channels of a group
- Details of minimum, maximum, average/ integral values and time period
- Display of the previous report

Group selection

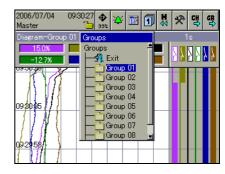

- Up to 9 groups are configurable
- Up to 6 analog and 6 binary channels can be shown for each group
- Measurement signals can be used in several groups

Presentation of event lists

006/07/04 1aster	09:35:42	() 39%	💓 🔤 👘							
Event list-clos	sed									
Date	Time		Description							
2006/07/04	09:35:19		CF card removed							
2006/07/04	09:35:19		CF card in place	Г						
2006/07/04	09:35:16		CF card removed	11						
2006/07/04	09:34:16	Ÿ,	POWER ON	1						
2006/07/04	09:33:42	💥	POWER OFF							
2006/07/04	09:26:29	Ŷ	Batch 01 end							
2006/07/04	09:25:28	Ŷ	Batch 01 start							
2006/07/04	09:05:31		NEW CONFIGURATION].						

- Display and storage of events and alarmsFor the instrument as a whole
- or batch-related
- Up to 150 entries visible on the recorder

 Delivery address:
 Mackenrodtstraße 14 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 Email:
 mail@jumo.net

 Internet:
 www.jumo.net


 JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585


Page 12/23

Configuration

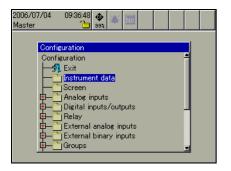

- Configuration on the recorder itself, by rotating and pressing the control knob
- Configuration through the setup program

Visualization through the web server

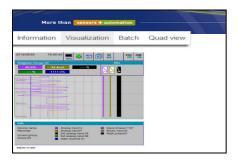

nformation	Visualization	Batch	Quad view	/
14/08/25 16:51:	» 🗮 🛎 🖬 🏭	명명		
45.7% 44.4	Visualization	60s		
	- Exil - Diagram - Bargraph - Text image			
	Process image Binary image Counters/integrators			
	Enter comments			
ito		-		
nfa Device name: 🛤 Recorder 🗰	Analog Input01	e timetut TCP ey inputtă h binerv01		



- Online visualization of a recorder
- Selection of customized HTML pages (created upon request)
- Control via latest browser version such as Internet Explorer 11 or above
- Navigation through the different recorder visualizations (curves, bar graph, text, process, binary; but no report)
- Active batch protocol available via menu
- Max. four recorders or four different visualizations simultaneously

 Delivery address:
 Mackenrodtstraße 14 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 Email:
 mail@jumo.net

 Internet:
 www.jumo.net

 JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com




Data Sheet 706585


Page 13/23

PC programs


PC Evaluation Software (PCA3000)

The PC Evaluation Software (PCA3000) is a program which runs under Microsoft Windows XP, Windows Vista, and Windows 7 (32 bit or 64 bit), and Windows 8 (32 bit or 64 bit), and is used to manage, archive, visualize and evaluate the recorder data.

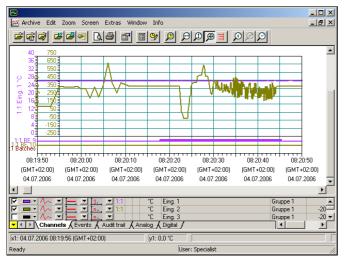

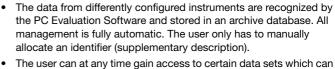

- The user can at any time gain access to certain data sets which can be distinguished by the identifier. It is also possible to restrict the time periods to be evaluated.
- Any analog or binary channels of a paperless recorder (even from different groups) can subsequently be combined into PCA groups in PCA3000.
- Since each group is displayed in a separate window, several groups can be shown simultaneously on the screen and compared.
- Operation by mouse or keys.
- Using the export filter, it is possible to export the stored data, so that they can be processed in other programs such as Excel.
- The PC Evaluation Software PCA3000 has network capability, i.e. several users can obtain data from the same archive file (*.177) in a network directory, independently of each other.

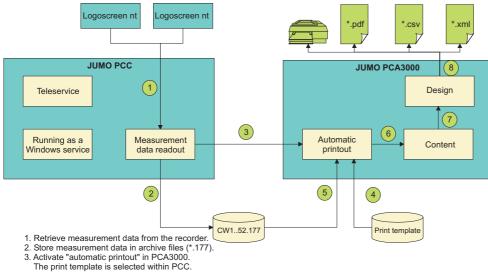

- Data can be read out from the recorder via the USB device interface, the serial interface (RS232/RS485) or via the Ethernet interface; the data can be read manually or automatically (e.g. daily at 23.00 hrs)
- Data can also be retrieved via remote control, through a modem

- PCC.
 Read the print template. Print templates are created within PCA3000.
- 5. Data transfer from archive.
- 6. Determine the content defined in the print template
- 7. Use the determined content in the defined design.

PCA Communications Software (PCC)

8. Output the completed design in the defined formats.

PC Security Manager (PCS)

Software for the administration of access control. This software is only accessible to administrators.

PC Audit-Trail Manager (PCAT)

Software for the documentation of PC operational actions that could lead to alterations in data recording.

Postal address: Phone: Fax: Email[.] Internet[®]

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany 36035 Fulda, Germany +49 661 6003-0 +49 661 6003-607 mail@jumo.net www.jumo.net

JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK +44 1279 63 55 33 Phone: +44 1279 62 50 29 Fax: Email: sales@jumo.co.uk Internet: www.jumo.co.uk

JUMO Process Control. Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 +1 315 437 5860 Fax: Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 14/23

Interfaces

- USB interfaces (standard)
- RS232/RS485 interface (standard)
- RS232 interface for barcode reader (standard)
- Ethernet interface (standard)
- **PROFIBUS-DP** interface (extra code)

USB interfaces

With USB interfaces, a distinction is made between the host and the device interface. A USB memory stick can be attached to the host interface. The device interface, in conjunction with a standard commercial USB cable, is used to operate the setup program. The paperless recorder without stainless steel front has host and device interfaces connected in parallel on both the front and back panels, of which only one of each type can ever be used. The paperless recorder with stainless steel front has only one host and one device interface at the rear panel.

RS232/RS485 interface

Current process data, as well as specific device data, can be read out via the RS232 or RS485 interface.

Data saved to the internal memory can also be read out in conjunction with the PC Evaluation Software PCA3000 and the PCA Communications Software (PCC).

The RS232 interface permits a maximum lead length of 15 m, the RS485 interface 1.2 km. Connection is by a 9-pin SUB-D connector on the back of the instrument. Modbus (master and slave) protocols are available, and the transmission mode used is RTU (Remote Terminal Unit).

RS232 for barcode reader

A barcode reader can be attached to the interface. The barcode reader can be used to start or stop batch reporting, and to set batch texts (customer information, batch number...).

The barcode reader can also be operated via the RS232/RS485 interface, and the RS232 interface for the barcode reader can also be used as a Modbus master or slave.

	USB Host/Device	RS232 RS485	Ethernet	PROFIBUS- DP	External CF card
Read current measurement data	yes (device only)	yes	yes	yes	no
Write current measurement data	no	yes	yes	yes	no
Read out stored measurement data	yes	yes	yes	no	yes
Read/write configuration	yes	yes	yes	no	yes
Write user list	yes	yes	yes	no	yes

Ethernet interface

The Ethernet interface can be used in local networks for the communication between the recorder and the setup program and the PCA Communications Software. The IP address is set permanently through the configuration on the instrument or in the setup program, or can be automatically received from a DHCP server.

The integrated web server allows simultaneous access by several PCs to 3 HTML and 3 batch pages.

Transmission protocol: TCP/IP

Network type: 10BaseT, 100BaseT

PROFIBUS-DP interface

The recorder can be integrated into a fieldbus system according to the PROFIBUS-DP standard via the PROFIBUS-DP interface. This PROFIBUS version is especially designed for communication between systems and distributed automation peripheral devices at the field level. Data are transmitted serially according to the

RS485 standard, with a maximum 12 Mbit/s. Using the project design tool that is included in the delivery (GSD generator; GSD = device master file), an application-specific GSD file is created, which is used to integrate the recorder into the fieldbus system.

External CompactFlash memory card (CF)

For paperless recorders without stainless steel front, the external CompactFlash memory card (CF) is used to transfer the data from the internal memory to the PC. Configuration data can be created on the PC and then transferred to the recorder by means of the memory card.

On the PC side, data on the card is accessed using a read/write device (CompactFlash reader/writer)

External inputs via interface

The paperless recorder can acquire and store up to 54 external analog inputs and 54 binary inputs.


Furthermore, the interfaces can be used to enter comments in the event list of the recorder

Stainless steel front $\langle \xi x \rangle$ (extra code 443 or 444)

The paperless recorder with extra code 443 or 444 (without extra code 350) may be installed in switch cabinets with at least a simplified pressurized enclosure. Under these conditions, use in a potentially explosive athmosphere (max. zones 1 and 21) is authorized from the front.

Notes installation on in Installation Instructions B 706585.4.1 must be complied with and followed.

Paperless recorders with authorization for explosion hazard areas, carry the following mark on the nameplate attached to the instrument.

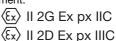

Caution: If extra code 443 or 444 is present, the CompactFlash memory card can no longer be used for external storage. Measurement data can be read out via one of the interfaces or via a USB memory stick (from the back).

 Delivery address:
 Mackenrodtstraße 14 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 Email:
 mail@jumo.net

 Internet:
 www.jumo.net

 JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com




Data Sheet 706585

Page 15/23

Connection diagram

Rear view with pluggable screw terminals

Instrument variant 1

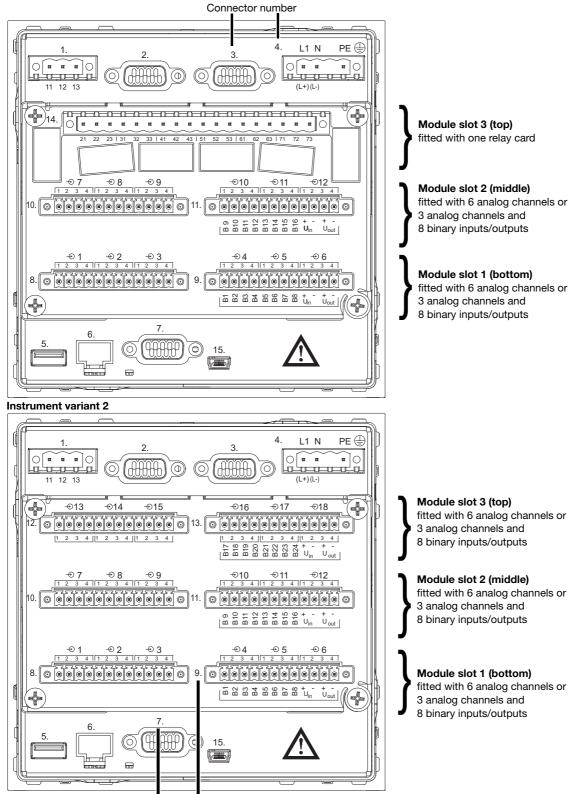

Connector number


Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mai@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 16/23

Instrument variant 3

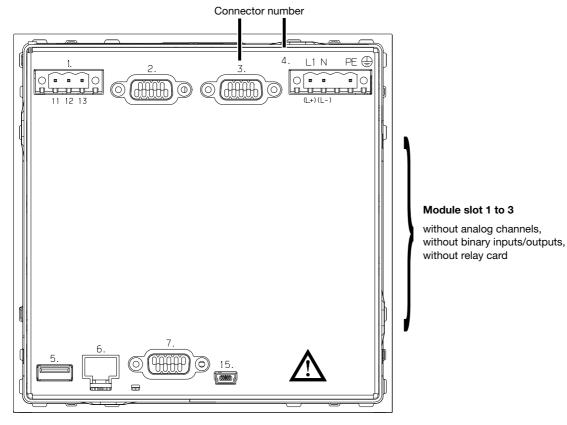

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mail@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 17/23

Terminal assignment	Connector	Diagram
Supply		
Supply as on nameplate	Connector 4 L1 (L+) N (L-) PE	L1 N PE 0 0 0 L1 N PE
Analog inputs	I	
Thermocouple		
RTD in 2-wire circuit		
RTD in 3-wire circuit	Connectors 8 to 11 (input 1 to 12) for instrument variant 1	
RTD in 4-wire circuit		
Resistance transmitter		$\begin{bmatrix} 1 & 2 & 3 & 4 & E = End \\ & E & S & A & S = Slider \\ & & & A = Start \end{bmatrix}$
Potentiometer in 2-wire circuit	or	
Potentiometer in 3-wire circuit	Connectors 8 to 13 (input 1 to 18) for instrument variant 2	
Potentiometer in 4-wire circuit		
Voltage input 0 to 1 V		$ \begin{array}{cccccccccccccccccccccccccccccccccccc$
Voltage input 0 to 10 V		$ \begin{array}{cccccccccccccccccccccccccccccccccccc$
Current input		

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mail@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 18/23

Terminal assignment	Connector	Diagram								
Binary inputs/outputs		Pidgram								
~										
Configuration (through the setup program	n or on the instrument) defines wh	nich are binary inputs and which are outputs.								
B1 to B8	Connector 9	^{no} O ⁿⁱ O								
	only on modules with									
voltage-controlled	3 analog inputs									
LOW = -3 to +5 V DC										
LOW = 12 to 30V DC	B1 binary input/ output 1	Load								
internal power supply 24V/60mA (U _{out})	to									
	B8 binary input/	+ -								
	output 8	⊂ 24V external power supply								
	U _{in} + external power supply	Example:								
	U _{in} - ground	Connecting a load to binary output 4 (B4) and a solid								
	U _{out} + +24V internal	state relay to binary output 3 (B3) requires an external								
	power supply	power supply.								
	U _{out} - ground									
	Sout ground	Diagram of the connector:								
		U O O I I I I I I I I I I I I I I I I I								
B9 to B16	Connector 11	O ⁱⁿ ^{non} ⁿ ⁿ ⁿ ⁿ ⁿ ⁿ ⁿ ⁿ ⁿ								
	only on modules with									
voltage-controlled	3 analog inputs									
LOW = -3 to $+5V$ DC	5 1									
LOW = 12 to 30V DC	B9 binary input/	Example:								
	output 9	Binary input 12 (B12) is operated from the internal								
internal power supply 24V/60mA (U _{out})	to	power supply.								
	B16 binary input/									
	output 16	Diagram of the connector:								
	U _{in} + external power									
	supply	BB13 BB13 U Uin+ U Outr U Outr								
	U _{in} - ground									
	U _{out} + +24V internal									
	power supply									
	U _{out} - ground									
B17 to B24	Connector 13	B13 B13 B13 B13 B13 B13 B13 B13 B13 B13								
	only for instr. variant 2									
voltage-controlled	and for modules with									
LOW = -3 to $+5V$ DC	3 analog inputs									
LOW = 12 to 30V DC		Example:								
	B17 binary input/	Binary input 20 (B20) is operated from the internal								
internal power supply 24V/60mA (U _{out})	output 17	power supply.								
	to									
	B24 binary input/	Diagram of the connector:								
	output 24	<u> </u>								
	U _{in} + external power	B17 B19 B19 B119 B119 B110 Ulin+ Ulin- Ulin- Ulouti								
	supply									
	U _{in} - ground									
	U _{out} + +24V internal									

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mail@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 19/23

Terminal assignment	Connector	Diagram	
Relay outputs			
Relay 1 changeover (SPDT)	Connector 1		
Relay 2 changeover (SPDT)			
Relay 3 changeover (SPDT)	Connector 14 only for instrument variant 1		
Relay 4 changeover (SPDT)			
Relay 5 changeover (SPDT)			
Relay 6 changeover (SPDT)	ėj (©•• A	62 61 63	
Relay 7 changeover (SPDT)			
Interfaces			
RS232 for barcode reader 9-pin SUB-D socket connector	Connector 2	2 RxDReceive Data3 TxDTransmit Data5 GNDGround	
PROFIBUS-DP 9-pin SUB-D socket connector (extra code)	Connector 3	3 RxD/TxD-PReceive/Transmit Data B conductor5 DGNDGround for data transn 6 VP6 VPVoltage supply-Pos.8 RxD/TxD-PReceive/Transmit Data A conductor	nission
USB host interface for connecting memory sticks	Connector 5	The recorder without stainless steel front a USB host interface on the front panel, con parallel. The two interfaces cannot both be at the same time.	nnected in
Ethernet RJ45 socket connector	Connector 6	1 TX+Transmit Data +2 TX-Transmit Data -3 RX+Receive Data +6 RX-Receive Data -	
RS232 9-pin SUB-D socket connector (switchable to RS485)	Connector 7	2 RxDReceive Data3 TxDTransmit Data5 GNDGround	
RS485 9-pin SUB-D socket connector (switchable to RS232)	Connector 7	3 TxD+/RxD+Transmit/Receive Data5 GNDGround8 TxD-/RxD-Transmit/Receive Data	
USB host interface for connecting a PC	Connector 15	The recorder without stainless steel front a USB device interface on the front panel, control in parallel. The two interfaces cannot both operated at the same time.	onnected


Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany Postal address: 36035 Fulda, Germany Phone: +49 661 6003-0 Fax: +49 661 6003-607 Email: mail@jumo.net Internet: www.jumo.net JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 20/23

Overview of the electrical isolation

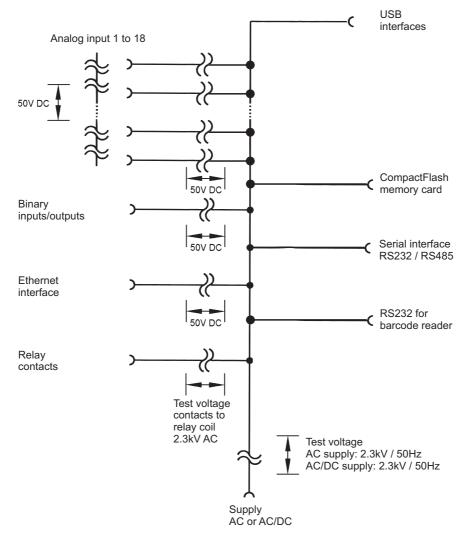

 Delivery address:
 Mackenrodtstraße 14 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 Email:
 mail@jumo.net

 Internet:
 www.jumo.net

 JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com





Data Sheet 706585

Page 21/23


Dimensions


Recorder with die-cast zinc front

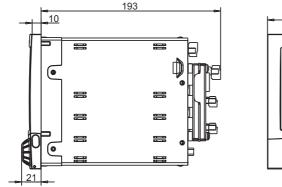

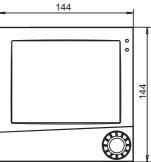


Recorder with stainless steel front (extra code 443 or 444)

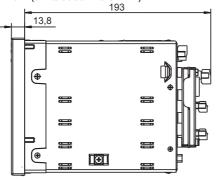


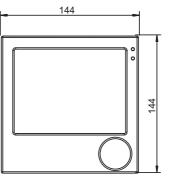


Panel cut-out

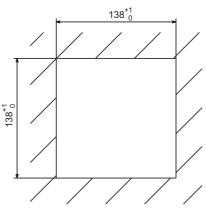

Universal carrying case option - TG-35

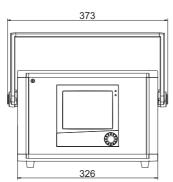

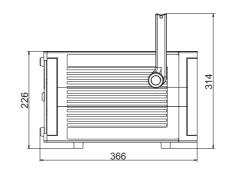

Postal address: Phone: Fax: Email: Internet:

Delivery address: Mackenrodtstraße 14 36039 Fulda, Germany 36035 Fulda, Germany +49 661 6003-0 +49 661 6003-607 mail@jumo.net www.jumo.net

JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk

JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Fax: Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 22/23

Order details

	(1)	Basic type
706585	.,	LOGOSCREEN fd
	(2)	Basic type extension
0		No software package
1		With software package (setup program, PCA3000, PCC, PCS, PCAT, USB cable)
	(3)	Language / Setup
8		Factory setting (German/English)
9		Set to customer specification
	(4)	Module slot 1
0		Not used
2		3 analog inputs and 8 digital inputs/outputs
3		6 analog inputs
	(5)	Module slot 2
0		Not used
2		3 analog inputs and 8 digital inputs/outputs
3		6 analog inputs
	(6)	Module slot 3
0		Not used
1		6 relay outputs
2		3 analog inputs and 8 digital inputs/outputs
3		6 analog inputs
	(7)	Voltage supply
25		AC/DC 20 to 30 V, 48 to 63 Hz
33		AC 100 to 240 V +10/-15 %, 48 to 63 Hz
	(8)	Extra codes memory
020		Lithium battery for memory buffering (ex-factory)
021		Storage capacitor (ATEX not possible)
	(9)	Extra codes
		Not used
260		Math and logic module
	(10)	Extra codes housing
		Not used
350		Universal carrying case TG-35 ^a
350, 444		Universal carrying case TG-35 ^a and stainless steel front with touchpad
443		Stainless steel front with touchpad, NEMA 4X and $\langle E_x \rangle$
444		Stainless steel front with touchpad <a>Ex>
	(11)	Extra codes
		Without extra codes
267		PROFIBUS-DP interface
879		AMS2750/CQI-9 ^b

^a This extra code is only available in combination with voltage supply AC 100 to 240 V. UL, ATEX and NEMA 4X approvals not applicable. The protection type in the carrying case corresponds to IP20, outside IP20D.

^b For the calibration certificate the channels to be checked are to be defined with the thermocouple type and the desired measuring points.

Order code	(1)	_	(2)	(3)		(4)	(5)	(6)		(7)		(8)		(9)	_	(10)		(11) ^a
Order example	706585	/			-				-		/		,		,		,	

^a Multiple entries for position 11 are possible. List extra codes in sequence, separated by commas.

 Delivery address:
 Mackenrodtstraße 14 36039 Fulda, Germany

 Postal address:
 36035 Fulda, Germany

 Phone:
 +49 661 6003-0

 Fax:
 +49 661 6003-607

 Email:
 mail@jumo.net

 Internet:
 www.jumo.net

 JUMO Instrument Co. Ltd. JUMO House Temple Bank, Riverway Harlow, Essex, CM20 2DY, UK Phone: +44 1279 63 55 33 Fax: +44 1279 62 50 29 Email: sales@jumo.co.uk Internet: www.jumo.co.uk JUMO Process Control, Inc. 6733 Myers Road East Syracuse, NY 13057, USA Phone: +1 315 437 5866 Fax: +1 315 437 5860 Email: info.us@jumo.net Internet: www.jumousa.com



Data Sheet 706585

Page 23/23

Standard accessories

- 1 Installation instructions B706585.4.X
- 1 Operating instructions B706585.1
- 4 mounting brackets
- 1 control panel seal
- 1 CD with detailed operating instructions and additional documentation

Accessories

- PC software package consisting of: Setup program, PC Evaluation Software (PCA3000), PCA Communications Software (PCC), PC Security Manager (PCS), and PC Audit-Trail Manager (PCAT). Please specify all version numbers when placing repeat orders.
- CompactFlash memory cards and USB memory sticks The CF cards and memory sticks specified by JUMO are tested and designed for industrial applications. The correct use with other brands cannot be guaranteed.
- USB cable